


OWNER'S MANUAL

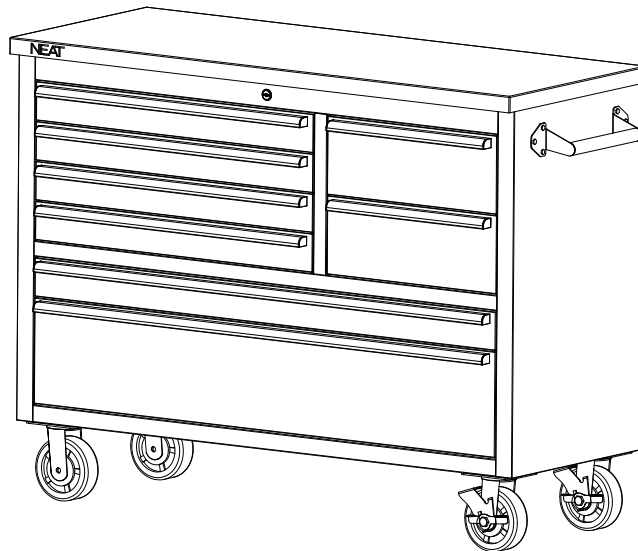

NEAT 46in STAINLESS STEEL ROLLING WORKBENCH Model # NLC-4828

IMPORTANT

FOR 3D ASSEMBLY INSTRUCTIONS/
DOWNLOAD THE FREE APP



BILT.[®]
Intelligent Instructions


PARTS LIST

Your NEAT 46in Stainless Steel Rolling Workbench should include the following parts. Please inspect box contents to ensure you have received all components.

If you are missing any parts, need assistance with assembly or have questions, please contact TRINITY Customer Service: 800.985.5506 or customerservice@trinityii.com. Parts can also be requested online via "Contact Us" section at www.trinityii.com.


10mm and 14mm wrenches are required.

A

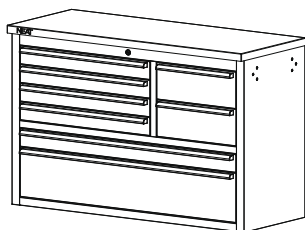


WORKBENCH (1)

B




SIDE HANDLE (1)

C



HANDLE BOLT (6)
M6

D

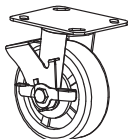


LOCKING CASTER (2)

E




**NON-LOCKING
CASTER (2)**

F



CASTER BOLT (16)
M10

G

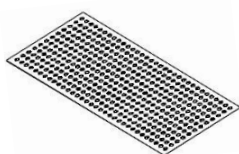

LINER (8)

H



KEY (2)


ASSEMBLY INSTRUCTIONS

STEP 1

Location of parts:



1) KEYS (H) are hooked on the key leash that is mounted in TOP LEFT Drawer.

2) CASTERS (D & E) and CASTER BOLTS (F) / LINERS (G) / SIDE HANDLE (B) and HANDLE BOLTS (C) are all in BOTTOM Drawer.

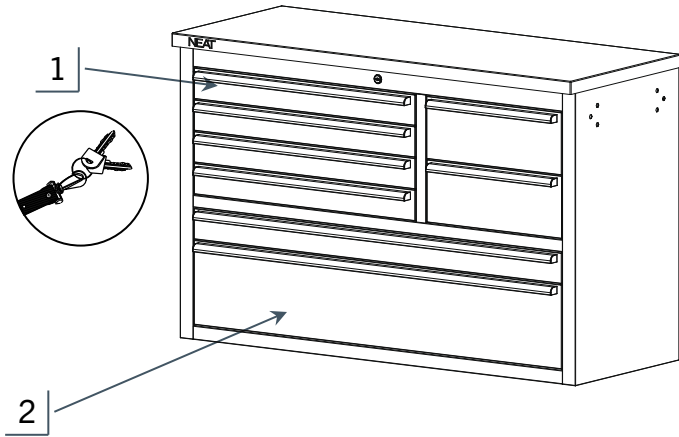

STEP 2

Position SIDE HANDLE (B) over pre-installed nuts on right side of WORKBENCH (A). Insert HANDLE BOLTS (C) through holes on SIDE HANDLE (B). Use a 10mm socket wrench to fully tighten HANDLE BOLTS (C) to WORKBENCH (A).

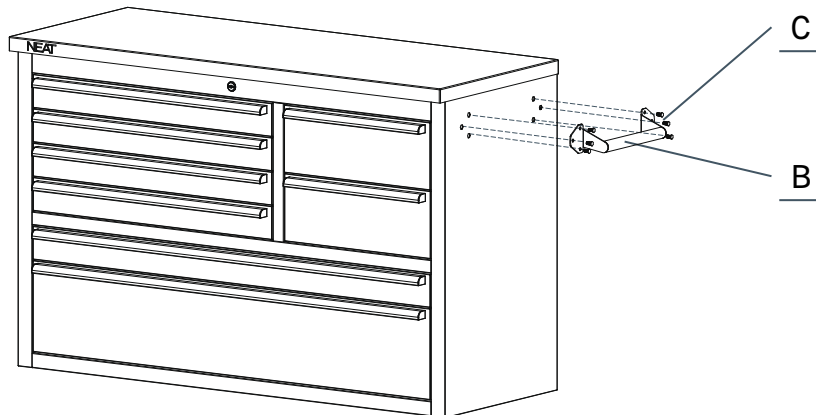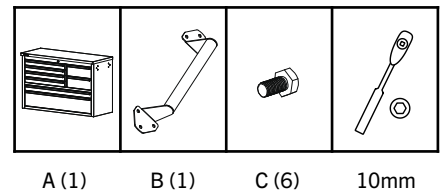

ASSEMBLY INSTRUCTIONS

STEP 3


Lay WORKBENCH (A) on its backside. Two people are needed. Do NOT attempt this alone.

Position LOCKING CASTERS (D) on side of WORKBENCH (A) of your choice and align holes to pre-installed nuts on underside of WORKBENCH (A). Use a 14mm socket wrench to fully tighten CASTER BOLT (F) to WORKBENCH (A).


Repeat to install NON-LOCKING CASTERS (E).

Note:

- Make sure to install both LOCKING CASTERS (D) on same side.
- For ease of use, place LOCKING CASTERS (D) on side you will regularly push or pull.
- If you plan to push workbench against a wall, place LOCKING CASTERS (D) on front long side for ease of access.

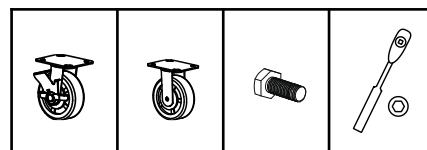

D (2) E (2) F (16) 14mm

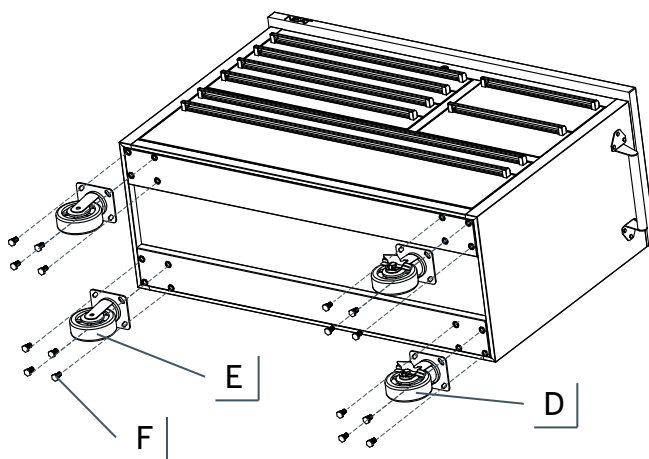


STEP 4

Carefully lift WORKBENCH (A) upright. Two people are needed. Do NOT attempt this alone.

Place LINERS (G) in each drawer.



G (8)

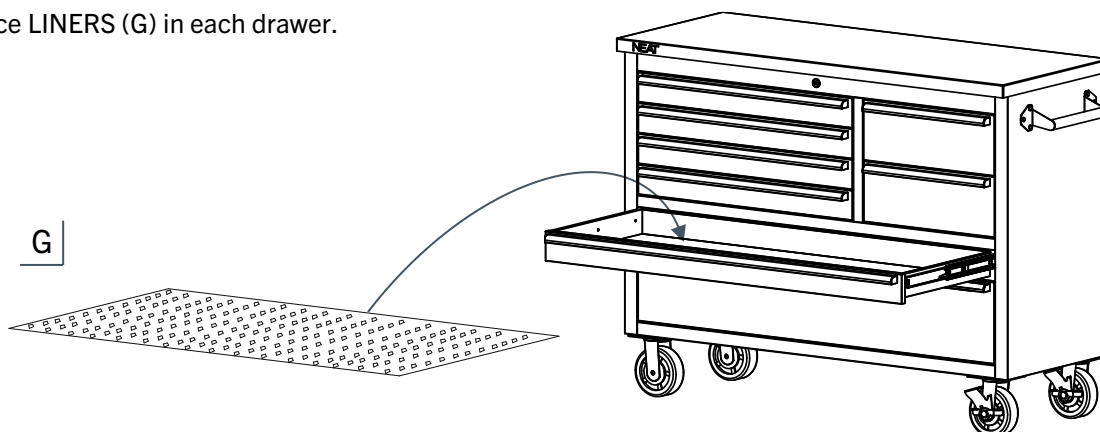


USAGE INSTRUCTIONS

DRAWER REMOVAL


Pull drawer out so that it is almost fully extended. On Right-hand side, pull black release lever UP. On Left-hand side, push black release lever DOWN. While holding levers as instructed, pull drawer forward until released from slides attached to Workbench ("Workbench Slides").

Note: Slides attached to drawer ("Drawer Slides") are an integral part of drawer and must be removed along with drawer itself.

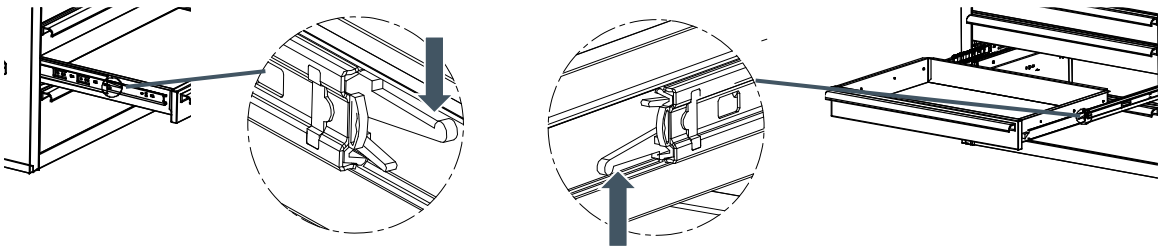

DRAWER REPLACEMENT


To replace drawer, pull slides out completely. Insert brackets on each side of Drawer Slides into corresponding slots on the Workbench Slides, making sure they are properly positioned. Once brackets are inserted into the slots, completely close the drawer to set all slides in their proper positions.

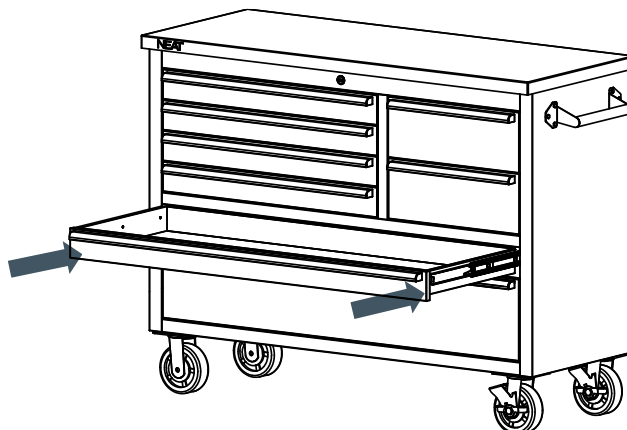

SERVICE PARTS LIST – NLC-4828

TRINITY Customer Service provides the following replacement parts:

#	Part Number	Description	#	Part Number	Description
1)	LNA-06-026-4618	Wood Top	12)	XBK-22-001-1416	14" Drawer Liner
2)	CSV-11-001-0XXX	Lock	13)	ZSV-99-001-5020	Locking Caster
3)	AMA-05-019-2400	24" Drawer Handle	14)	ZSV-12-027-1500	Slide (Drawer side)
4)	XBS-07-020-2603	26" Drawer	15)	ZSV-12-028-1500	Slide (Workbench side)
5)	XBS-07-020-4303	43" Small Drawer	16)	XBS-07-020-1606	16" Drawer
6)	AMA-05-019-4100	41" Drawer Handle	17)	AMA-05-019-1400	14" Drawer Handle
7)	XBS-07-020-4308	43" Large Drawer	18)	XBK-23-007-2512	End Cap
8)	ZSV-01-001-1020	Caster Bolt	19)	ZSV-01-001-0612	Handle Bolt
9)	ZSV-99-002-5020	Non-locking Caster	20)	XSV-05-001-0900	Side Handle
10)	XBK-22-001-2416	24" Drawer Liner	21)	XBK-02-047-0001	Key Leash
11)	XBK-22-001-4116	41" Drawer Liner	22)	XBK-10-001-0XXX	Key

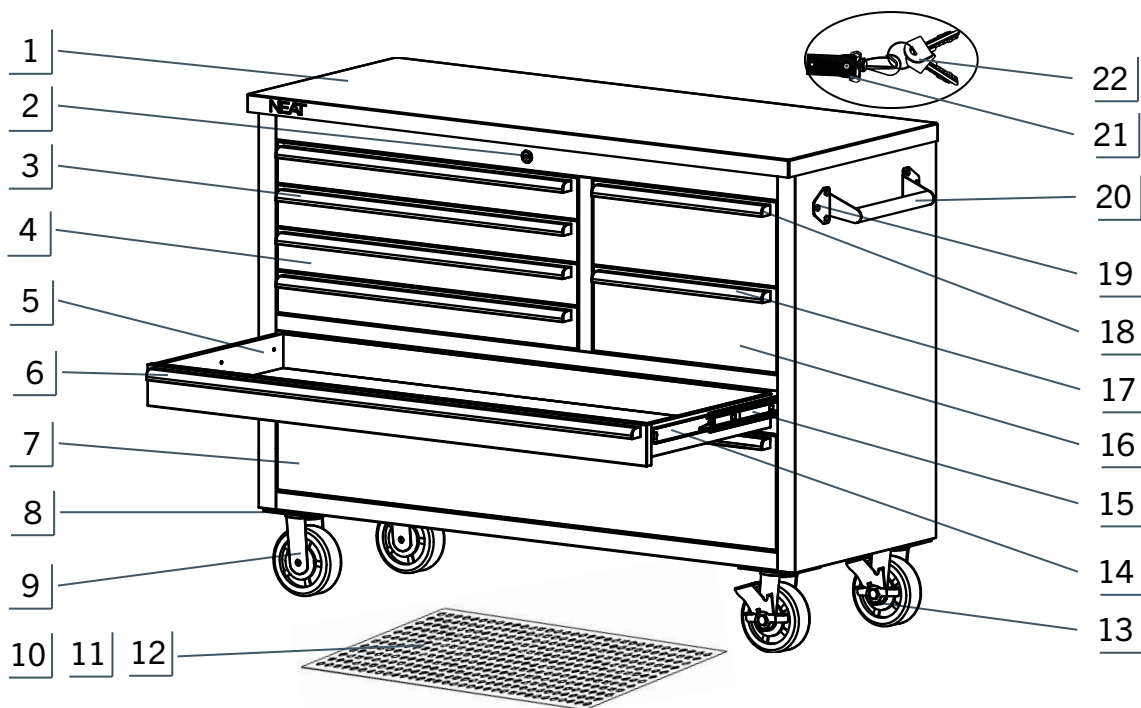

WARNINGS

1. **Read and understand all instructions.** Failure to follow all instructions may result in injury and / or damage.
2. **The warnings, cautions, and instructions discussed in this manual cannot cover all possible conditions or situations that may occur.** The user must always be aware of the environment and ensure to use the product in a safe and responsible manner.
3. **Do NOT modify the product in any way.** Unauthorized modification may impair the function and / or safety of the product and may affect the life of the product. Any modifications will void product warranty.
4. **Check for damaged parts.** Before using this product, carefully check that all parts are in good condition, and that the product will operate properly and perform its intended function. Replace damaged or worn parts and never use this product with a damaged part.
5. **Do NOT overload the product.** Below capacity is based on evenly distributed weight.

Weight capacity per drawer	34 kg / 75 lb
Total weight capacity of workbench	816 kg / 1800 lb

6. **Lock casters when leaving workbench in stationary position.**
7. **Lock drawers before moving the workbench.**
8. **Remove all items from wood top before moving the workbench.** Items may fall causing injury.
9. **Always move workbench with two people.** Roll slowly and constantly check surroundings to ensure enough clearance. Heavy weight workbench can be hard to stop if moving too fast, causing serious injury or damage.
10. **Do NOT open more than one drawer at a time.** Tipping can occur.
11. **Do NOT step or lean on open drawers.** Tipping can occur.
12. **Do NOT lift workbench by wood top.** Wood top may separate causing injury.
13. **Do NOT hang on the wood top.** Tipping can occur
14. **Do NOT let children play near the workbench.**
15. **Load workbench starting with bottom drawers to prevent workbench from tipping**
16. **Make sure all drawers are closed tightly before locking or unlocking.**

CARE AND MAINTENANCE

- Avoid harsh, abrasive cleaners, and other corrosive chemicals. Do not use scouring pad for cleaning.
- Keep dry and avoid damp environments.
- Wood top can be cleaned with damp cloth and wiped dry immediately with dry cloth. If needed, solvent-based wood furniture cleaner can be used.
- Clean up any spills immediately to prevent stains from forming on the wood top.





1 YEAR LIMITED WARRANTY

NEAT 46in Stainless Steel Rolling Workbench Model # NLC-4828

Trinity International Industries (“Trinity”) warrants to the original consumer purchaser (“Purchaser”) that Trinity’s products (each a “Product”) shall be free from defects in workmanship and materials for a period of one (1) year from the date of original purchase. Trinity’s obligation under this warranty shall be limited to repair or replacement of, or adequate compensation for the Product which shall not be greater than the amount of the purchase price of the Product, at the option of Trinity, during the warranty period. Repair or replacement of the Product will be performed within a reasonable time after notice of the defect has been provided to Trinity by the Purchaser. All replaced parts and Products become the property of Trinity and must be returned to Trinity.

This warranty excludes normal wear and tear of the Product and its parts or components, and damage arising from any of the following: negligent use or misuse of the Product, use contrary to this User’s Manual, or alteration by anyone other than Trinity. The warranty period of one (1) year shall not be extended or renewed by the repair or replacement of, or compensation for, the Product. Any warranty implied by applicable law is limited in duration to one year from the date of purchase and is subject to the same conditions and limitations as is provided for our express warranty.

No warranty or guarantee given by any person, firm, or corporation other than Trinity with respect to the Product shall be binding on Trinity.

If your Product is defective or otherwise requires service or parts, please call Trinity Customer Service toll-free at (800) 985-5506, between 5:00 a.m. and 5:00 p.m. PST. Please tell us which model you purchased, the date of the purchase, and the problem with your Product. A copy of your original purchase receipt must accompany your service request.

LIMITATION OF REMEDIES AND LIABILITY

Trinity (and its employees, officers, members, managers, affiliates and assigns) shall not be liable for any incidental, consequential, special, indirect, remote, special or punitive damages for breach of any warranty, express or implied, including, but not limited to, lost profits, lost savings, loss of anticipated benefits and attorneys’ fees, which arise out of the purchase, use or inability to use the Product, whether arising out of contract, negligence, strict tort, product liability, or any other legal theory on which a claim is based. As noted above, to the extent damages are allowed by our express warranty or by applicable law, those damages may not exceed the purchase price paid for the Product. Without limiting the foregoing, Purchaser assumes all risk and liability for loss, damage, or injury to Purchaser and Purchaser’s property and to others and their property arising out of the use, misuse, or inability to use the Product. This limited warranty shall not extend to anyone other than the original purchaser of the Product, is nontransferable, and states your exclusive remedy.

Some States do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. Some States do not allow the exclusion or limitation of incidental, consequential, special, or punitive damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may have other rights which vary from State to State.

PRODUCT REGISTRATION

Thank you for purchasing our product. To receive streamlined customer service, please register your product online at <https://trinityii.com/pages/product-registration>

CONTACT US

**QUESTIONS? NEED PARTS?
WE ARE HERE TO HELP!**

Please feel free to contact us. There are no questions too small, or any problems too big. We're committed to providing our customers with the highest level of service.

TRINITY Customer Service

TEL: 800.985.5506

FAX: 310.347.4134

EMAIL: customerservice@trinityii.com

**Monday through Friday
5:00 AM – 5:00 PM (PST)**

www.trinityii.com