




OWNER'S MANUAL

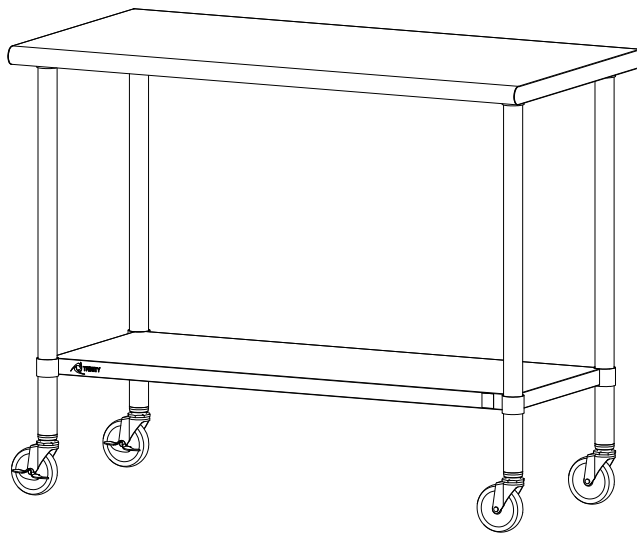

TRINITY 48" STAINLESS STEEL TABLE WITH CASTERS Model # THA-0221C

Important / Important / Importante

FOR 3D ASSEMBLY INSTRUCTIONS
POUR DES DIRECTIVES D'ASSEMBLAGE 3D
PARA INSTRUCCIONES DE ENSAMBLAJE EN 3D



BILT.[®]

Intelligent Instructions
Directives intelligentes
Instrucciones Inteligentes




DOWNLOAD THE FREE APP | TÉLÉCHARGER L'APPLICATION GRATUITE | DESCARGUE LA APLICACIÓN GRATUITA

PARTS LIST

Your TRINITY 48" Stainless Steel Table With Casters should include the following parts. Please inspect box contents to ensure you have received all components.


If you are missing any parts, need assistance with assembly or have questions, please contact TRINITY Customer Service: 800.985.5506 or customerservice@trinityii.com. Parts can also be requested online via "Contact Us" section at www.trinityii.com.

A

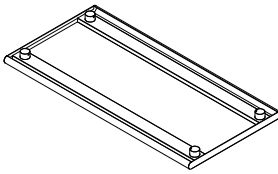


TABLETOP (1)

B

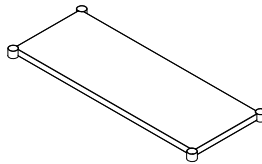

SHELF (1)

C

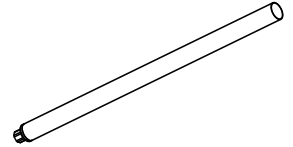

LEG (4)
Feet Leveler pre-installed

D




HEX SCREW (8) + 1 extra

E



SCREW CAP (8) + 1 extra

F



HEX KEY (1)

G



**NON-LOCKING
CASTER (2)**

H



**LOCKING
CASTER (2)**

I



ADAPTER (4)


J



WRENCH (1)

ASSEMBLY INSTRUCTIONS

STEP 1

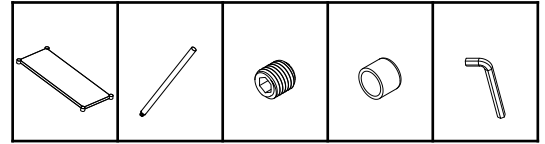


B (1) C (4) D (4) E (4) F (1)


Place SHELF (B) on its side and slide each LEG (C) through each Shelf Collar on SHELF (B) as shown in direction of Alignment Sticker. Use Alignment Stickers on legs to help level out SHELF (B).

Insert a HEX SCREW (D) into screw hole on each Shelf Collar and tighten with HEX KEY (F). Place a SCREW CAP (E) over each HEX SCREW (D).

Note: LEG (C) should go into Shelf Collar in arrow pointing direction of Alignment Sticker. LEG (C) will NOT fit though Shelf Collar in opposite direction.

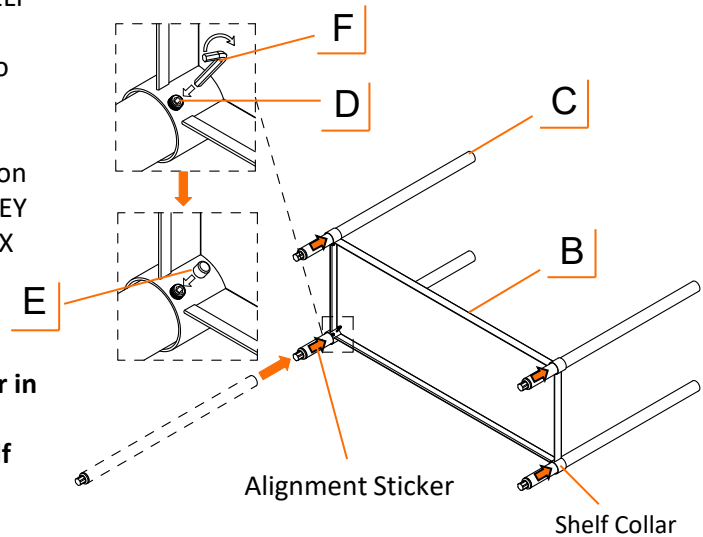

STEP 2

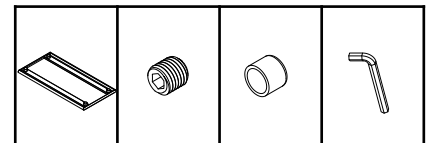


A (1) D (4) E (4) F (1)

Lay TABLETOP (A) upside down on a clean smooth surface.

With two people, attach assembly from STEP 1 to TABLETOP (A) by inserting each leg into corresponding Leg Collar on TABLETOP (A) as shown.

Insert a HEX SCREW (D) into screw hole on each Leg Collar and tighten with HEX KEY (F). Place a SCREW CAP (E) over each HEX SCREW (D).

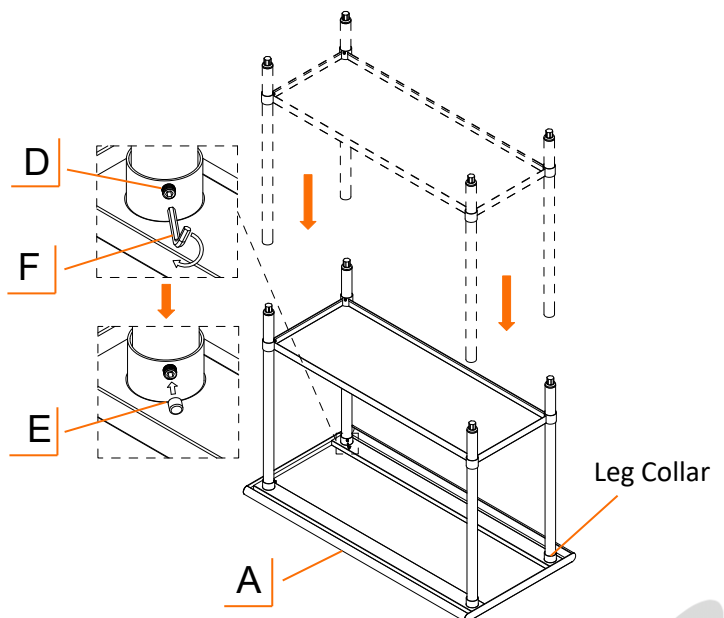


ASSEMBLY INSTRUCTIONS

STEP 3


Stationary Option

With two people, stand assembled table right side up. Adjust Feet Levelers as needed to ensure table is stable and level.

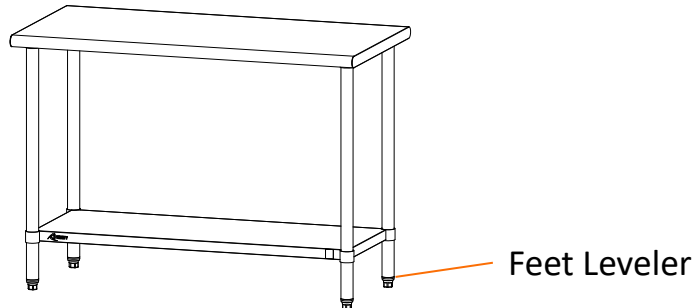


Mobile Option

Unscrew Feet Leveler from each LEG (C). Screw ADAPTER (I) onto each CASTER (G/H). Screw CASTER (G/H) into each LEG (C). Make sure to place (2) LOCKING CASTERS (H) on same side of table. Tighten as much as possible with provided WRENCH (J).

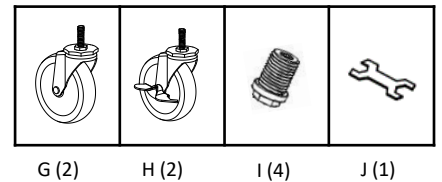

Use provided caster wrench to tighten completely. Failure to do as instructed could result in caster stem breaking.

With two people, stand assembled table right side up.

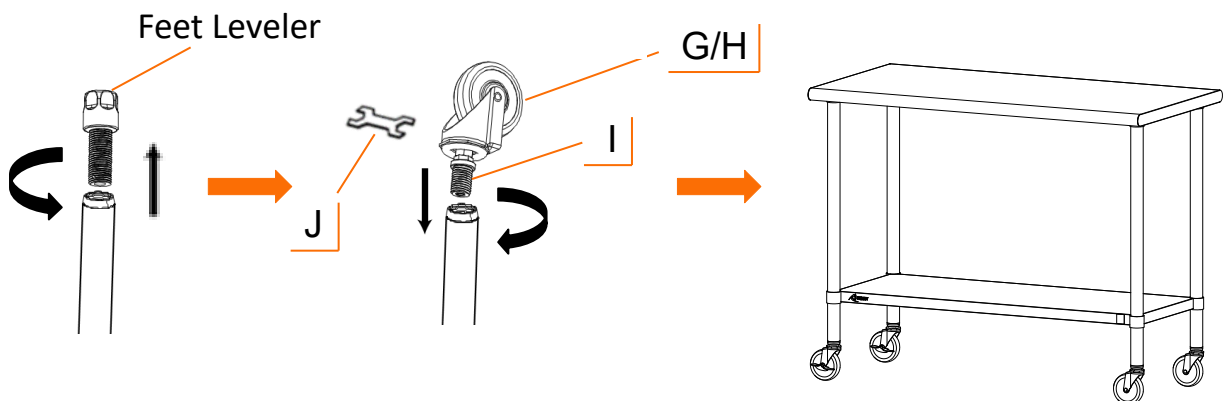


USAGE INSTRUCTIONS

SHELF HEIGHT ADJUSTMENT

Height of shelf can be adjusted. Before adjusting, ensure all items have been removed from tabletop and shelf.


Remove (4) SCREW CAPS (E) and unscrew (4) HEX SCREWS (D) from shelf collar to unfasten shelf from legs. Tilt shelf diagonally to move it up or down to your desired height. Reattach shelf to LEGS (C) with (4) HEX SCREWS (D). Fully tighten HEX SCREWS (D) with hex key. Place a SCREW CAP (E) over each HEX SCREW (D).

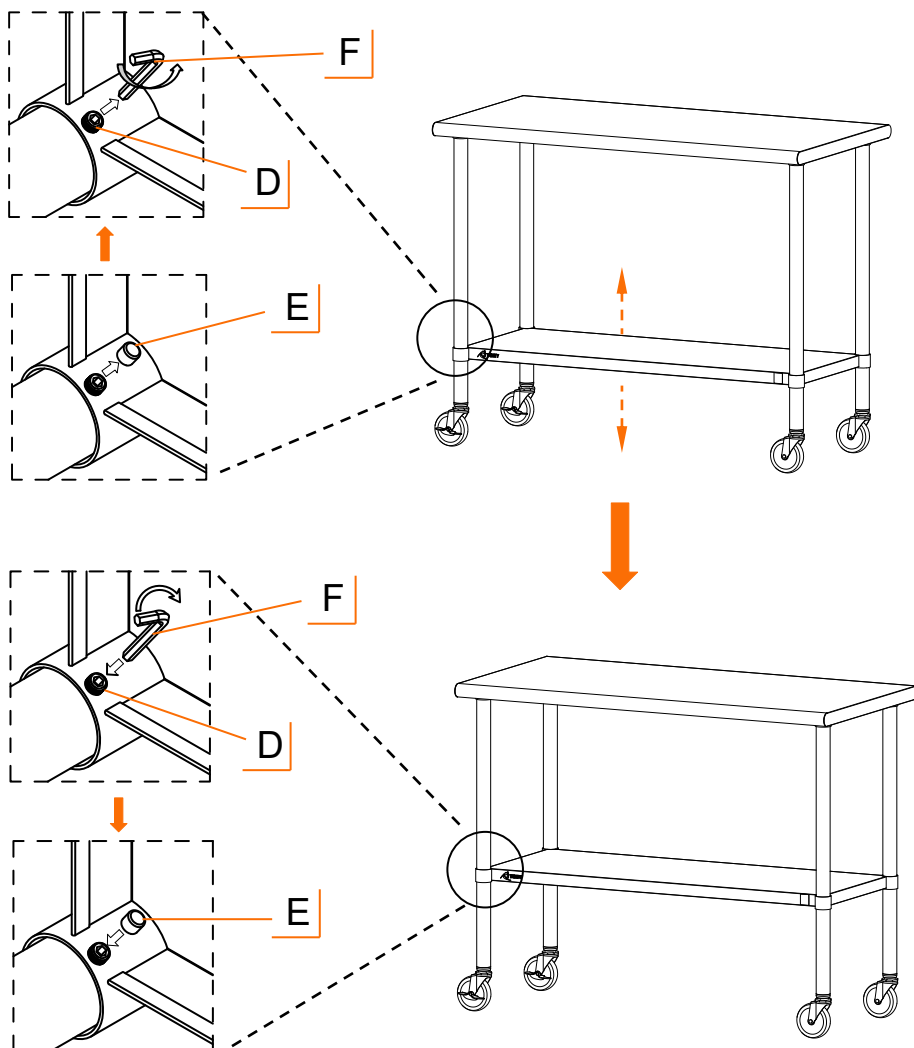

SERVICE PARTS LIST – THA-0221C

TRINITY Customer Service provides the following replacement parts:

Part Number	Description	Part Number	Description
1) XBS-06-024-4824	Tabletop	6) ZSV-02-011-0047	Hardware Kit
2) XBS-03-129-4416	Shelf	7) XBK-01-016-2535	Adapter
3) XGL-04-079-3300	Leg	8) ZSV-99-007-4010	Non-locking Caster
4) XSV-98-004-3283	Feet Leveler	9) XXX-97-002-0001	Wrench
5) ZSV-99-008-4010	Locking Caster		

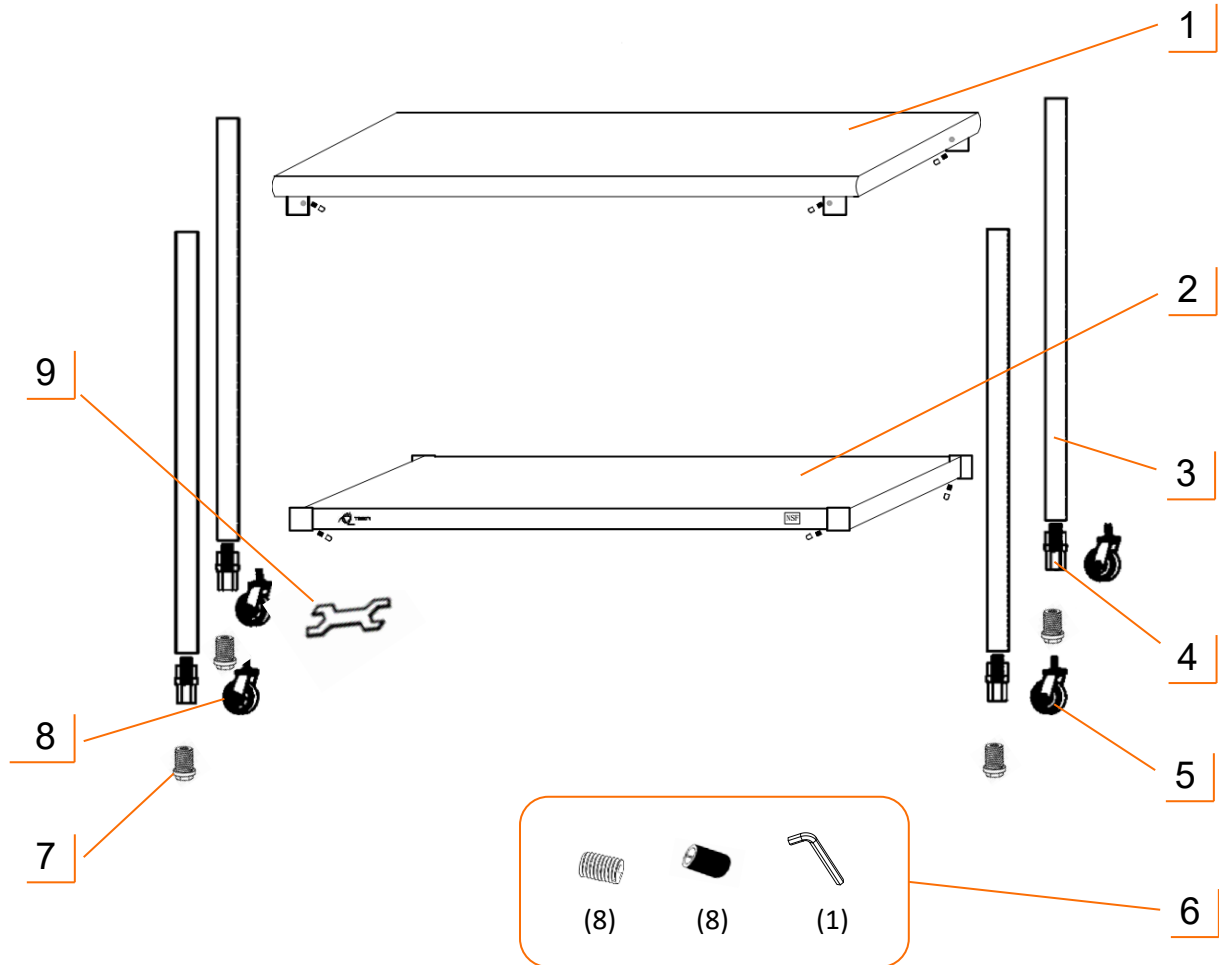

WARNINGS

1. **Read and understand all instructions.** Failure to follow all instructions may result in injury and/or damage.
2. **The warnings, cautions, and instructions in this manual cannot cover all possible conditions or situations that may occur.** The user must always be aware of their environment and ensure that they use the product in a safe and responsible manner.
3. **Do NOT modify the product in any way.** Unauthorized modification may impair the function and/or safety of the product and may affect the life of the product. Any modifications will void warranty.
4. **Check for damaged parts.** Before using this product, carefully check that all parts are in good condition, and that the product will operate properly and perform its intended function. Replace damaged or worn parts and never use this product with a damaged part.
5. **Table must be used with at least one shelf installed for stability.** Additional shelf can be added and is available on trinityii.com.
6. **Use the provided caster wrench to tighten casters completely.** Failure to do as instructed could result in the caster stem breaking thereby causing the shelving rack to collapse.
7. **Lock the casters when being used as a work surface.**
8. **Do NOT overload the product.**

Weight capacity per shelf	68 kg / 150 lb (evenly distributed)
Total weight capacity on feet levelers	408 kg / 900 lb (evenly distributed)
Total weight capacity on casters	136 kg / 300 lb (evenly distributed)

CARE AND MAINTENANCE

- Use a quality stainless steel cleaner and follow instructions that come with the cleaner. Wipe **ALONG** the grain (**NOT** against).
- Avoid harsh, abrasive cleaners, and other corrosive chemicals.
- Do **NOT** use scouring pad for cleaning.
- Keep dry and avoid damp environments. Should not be left out unprotected in the elements.

PRODUCT REGISTRATION

Thank you for purchasing our product. To receive streamlined customer service, please register your product online at trinityii.com/pages/product-registration

1 YEAR LIMITED WARRANTY

For information on our warranty policy, please check online at trinityii.com/pages/warranty.

A printed copy of the warranty for this product is available upon request, free of charge. The consumer may request a printed copy of the warranty by: (1) calling Trinity at **800.985.5506**, or (2) sending an email to Trinity at customerservice@trinityii.com. Trinity will mail a printed copy of the warranty to the consumer's preferred address by U.S. Mail.

CONTACT US

**QUESTIONS? NEED PARTS?
WE ARE HERE TO HELP!**

Please feel free to contact us. There are no questions too small, or any problems too big. We're committed to providing our customers with the highest level of service.

TRINITY Customer Service

TEL: 800.985.5506

FAX: 310.347.4134

EMAIL: customerservice@trinityii.com

**Monday through Friday
5:00 AM – 5:00 PM (PST)**

www.trinityii.com